 



common cable connections




Unbalanced jack to jack



 
Balanced jack to jack




Balanced to unbalanced jack

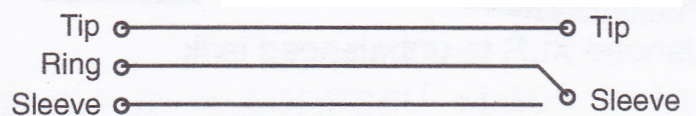



Screen left unconnected at unbalanced end

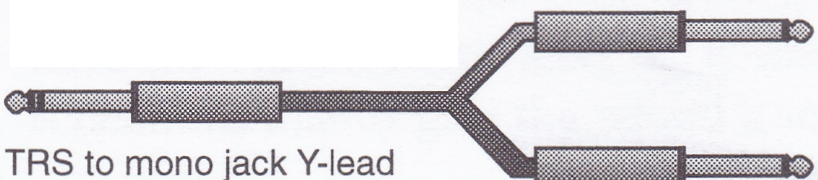


TRS to mono jack Y-lead (insert points)

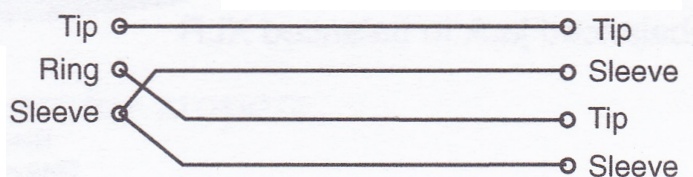


TRS to XLR Y-lead (insert points). Not all insert points are wired to the same convention, so check your mixer manual

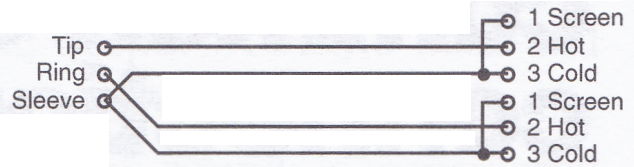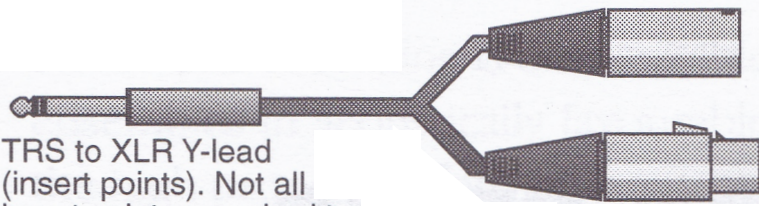

Unbalanced XLR to XLR

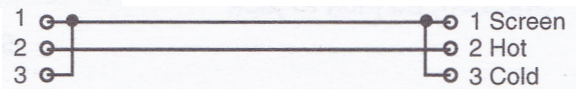

Balanced XLR to XLR

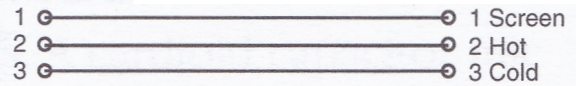


Balanced XLR to unbalanced jack



Screen left unconnected at unbalanced end

Note: on some equipment, XLR pin 1 must be joined to pin 3 when using unbalanced. Consult equipment manual for details

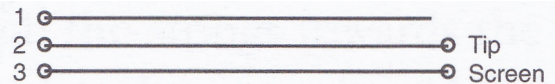

Unbalanced jack to balanced XLR

